


# **Protocol Principles**


Layering, CL versus CO Service, ARQ Techniques, Sequence Numbers, Windowing, Flow Control


Agenda	
• Introduction	
<ul> <li><u>3 Layer Model and Service Types</u></li> </ul>	
<ul> <li>ARQ Techniques</li> </ul>	
– Introduction	
– Idle RQ	
<ul> <li>Continuous RQ</li> </ul>	
<ul> <li>Selective Acknowledgement</li> </ul>	
GoBackN	
<ul> <li>Positive Acknowledgement</li> </ul>	
<ul> <li>Sequence Numbers and Windowing</li> </ul>	
<ul> <li>Delay Bandwith Product</li> </ul>	
– Flow Control	
– HDLC Overview	
© 2007, D.I. Manfred Lindner Protocol Principles, v4.5	2

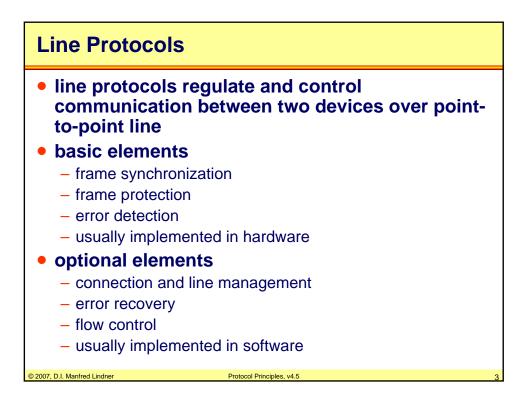


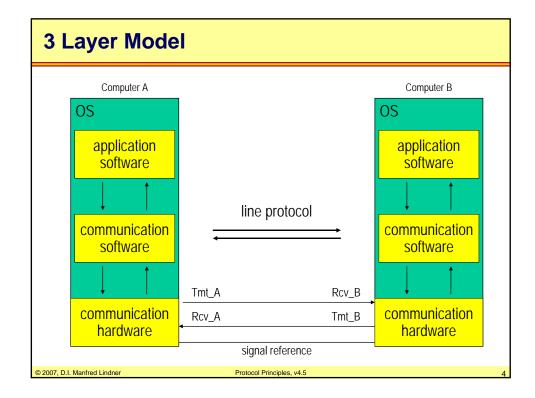


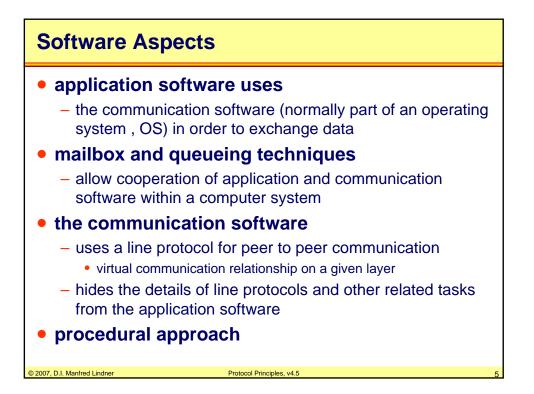


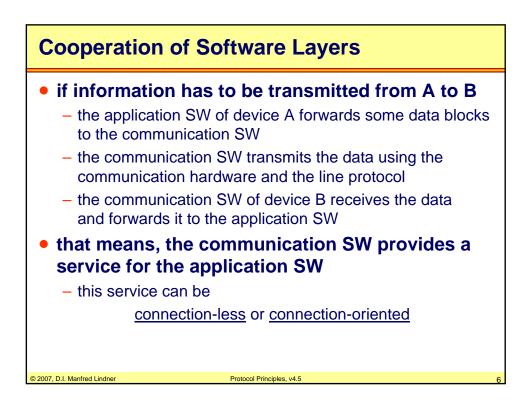


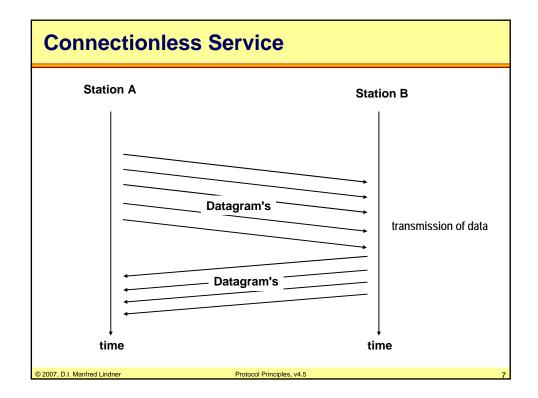


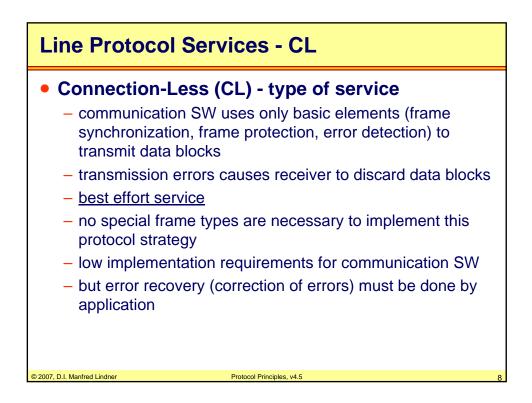


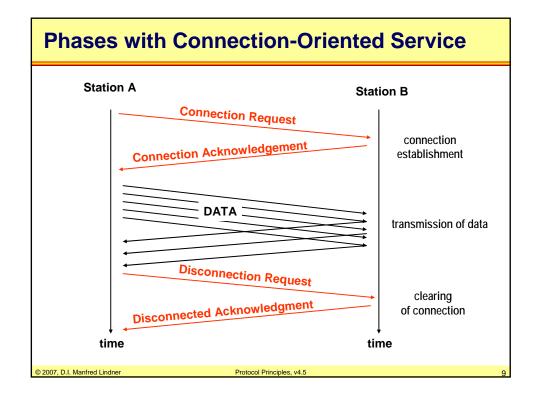


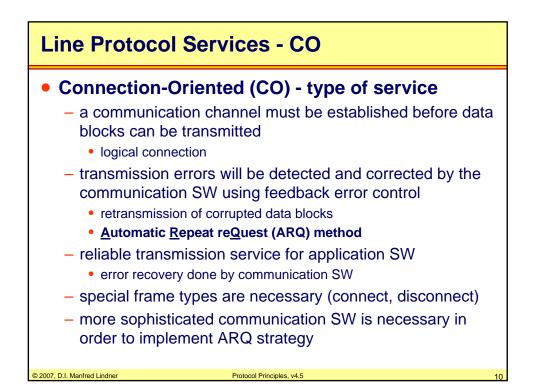


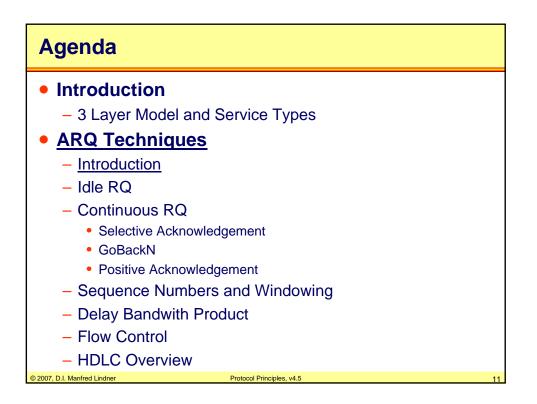

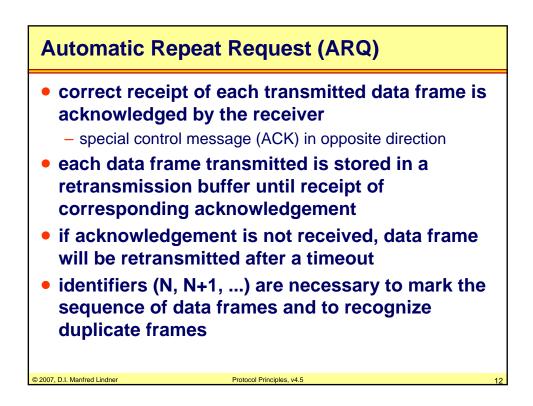


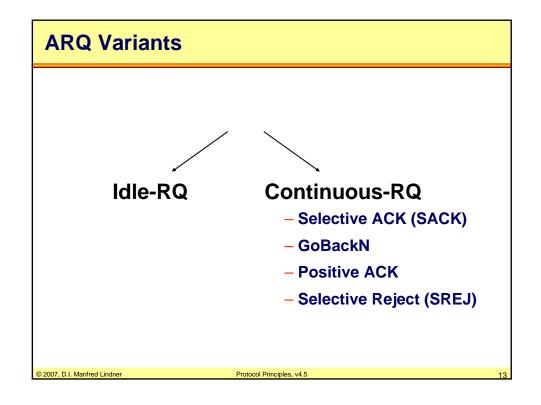


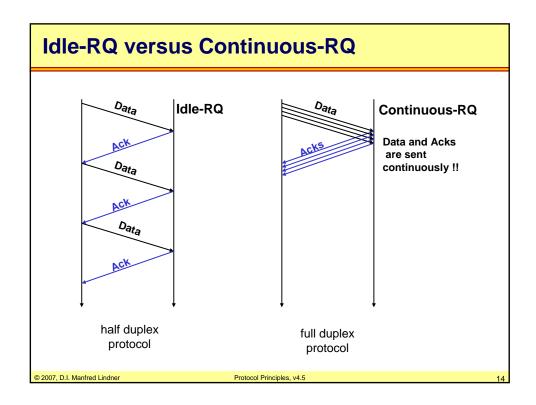


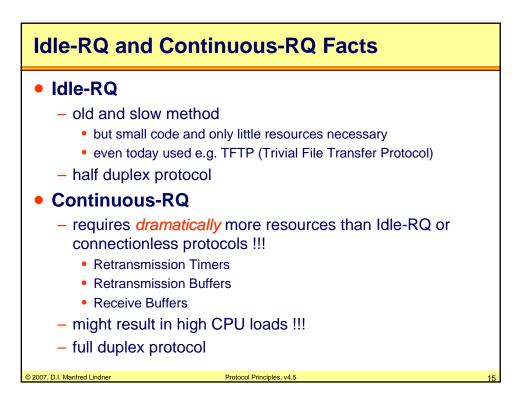



Agenda	
Introduction	
– 3 Layer Mode	el and Service Types
ARQ Techniq	<u>ues</u>
<ul> <li>Introduction</li> </ul>	
– <u>Idle RQ</u>	
<ul> <li>Continuous R</li> </ul>	Q
<ul> <li>Selective Ac</li> </ul>	knowledgement
<ul> <li>GoBackN</li> </ul>	
<ul> <li>Positive Ack</li> </ul>	nowledgement
<ul> <li>Sequence Nu</li> </ul>	mbers and Windowing
<ul> <li>Delay Bandw</li> </ul>	ith Product
<ul> <li>Flow Control</li> </ul>	
<ul> <li>HDLC Overvi</li> </ul>	ew
© 2007, D.I. Manfred Lindner	Protocol Principles, v4.5 16

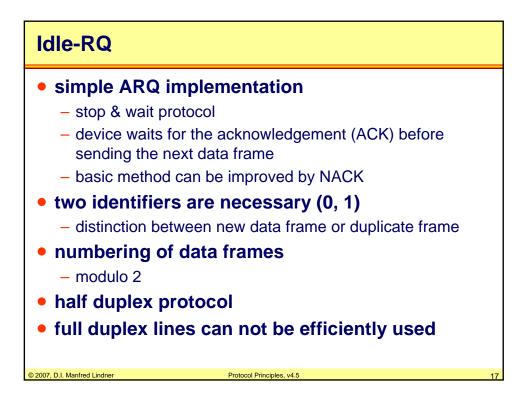

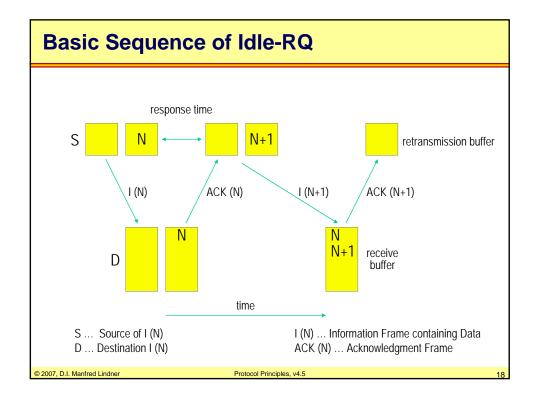


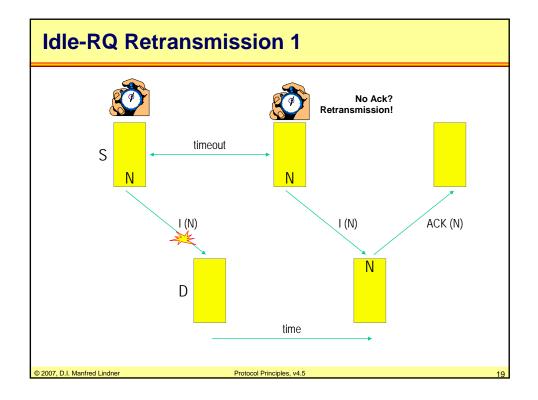


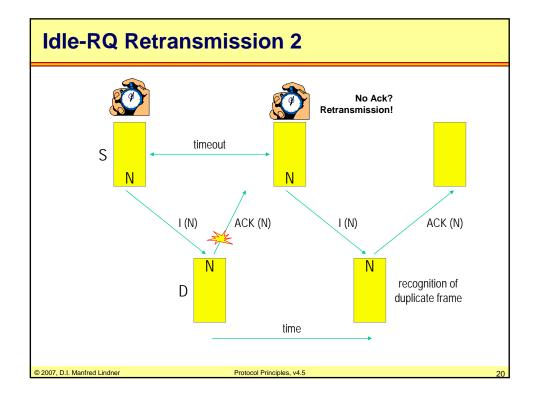


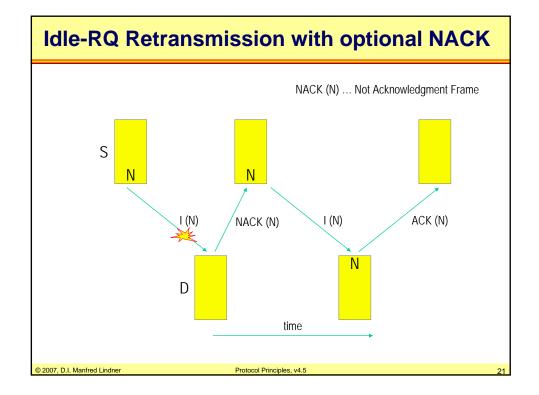



Agenda	
• Introduction	
- 3 Layer Mode	el and Service Types
• ARQ Technic	ues
<ul> <li>Introduction</li> </ul>	
– Idle RQ	
– Continuous F	<u>(Q</u>
<ul> <li>Selective Ac</li> </ul>	knowledgement
<ul> <li>GoBackN</li> </ul>	
<ul> <li>Positive Ack</li> </ul>	nowledgement
<ul> <li>– Sequence Nu</li> </ul>	Imbers and Windowing
<ul> <li>Delay Bandw</li> </ul>	ith Product
<ul> <li>Flow Control</li> </ul>	
<ul> <li>HDLC Overvi</li> </ul>	ew
© 2007, D.I. Manfred Lindner	Protocol Principles, v4.5 22

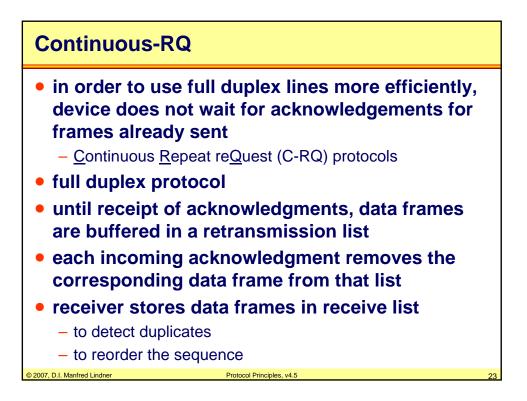


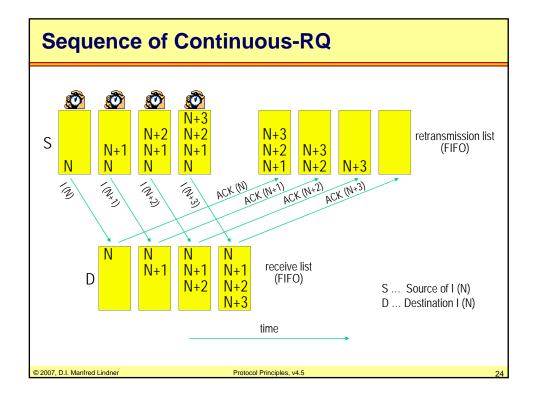


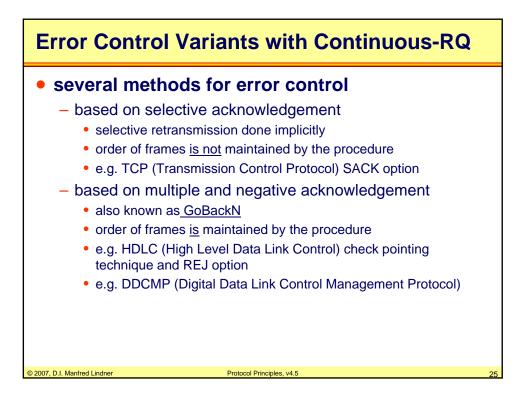


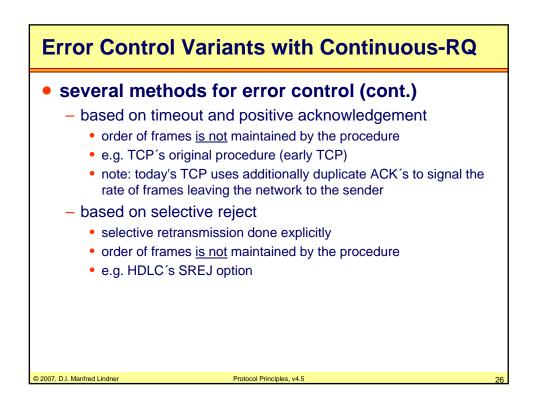


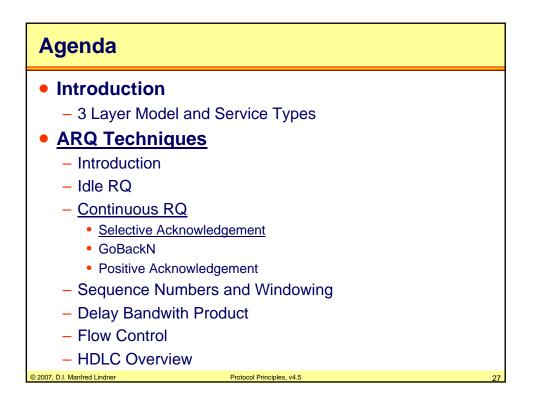

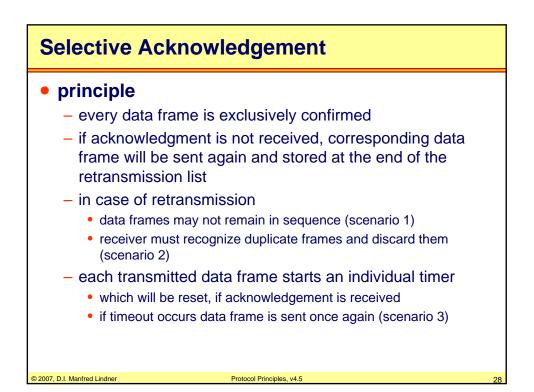


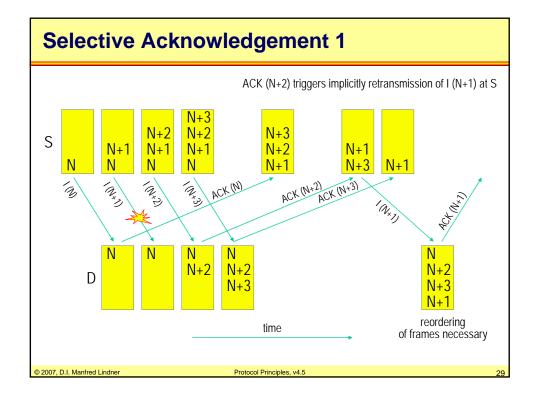


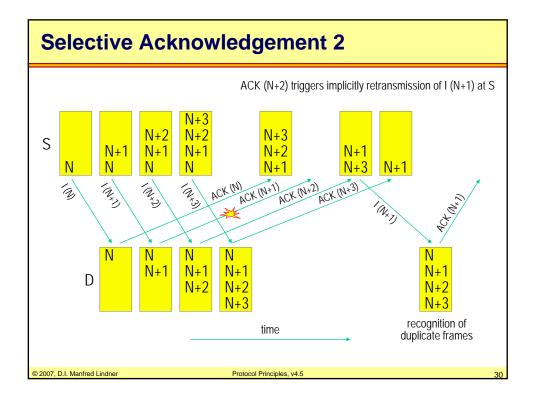


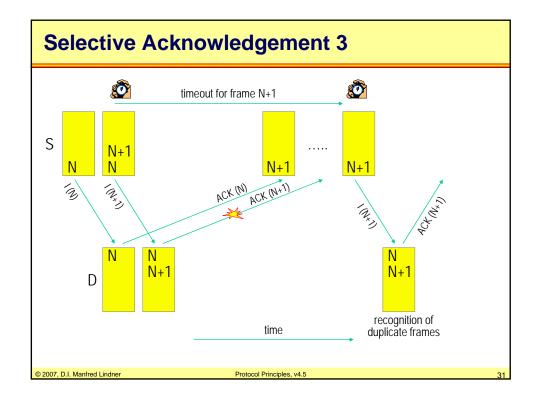



Agenda	
• Introduction	
- 3 Layer Mode	and Service Types
• ARQ Techniq	ues
<ul> <li>Introduction</li> </ul>	
– Idle RQ	
<ul> <li><u>Continuous R</u></li> </ul>	<u>Q</u>
<ul> <li>Selective Ack</li> </ul>	nowledgement
<ul> <li><u>GoBackN</u></li> </ul>	
<ul> <li>Positive Ackn</li> </ul>	owledgement
<ul> <li>Sequence Nul</li> </ul>	mbers and Windowing
<ul> <li>Delay Bandwit</li> </ul>	th Product
<ul> <li>Flow Control</li> </ul>	
– HDLC Overvie	₩
© 2007, D.I. Manfred Lindner	Protocol Principles, v4.5 32

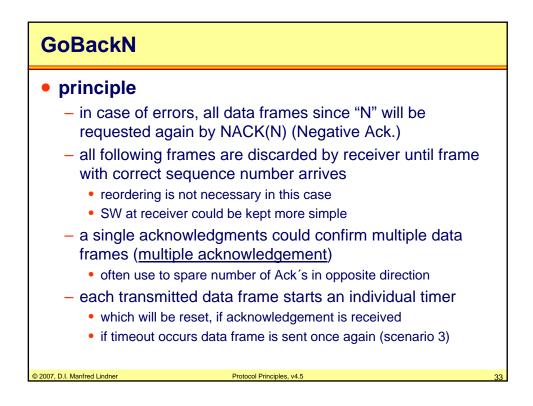

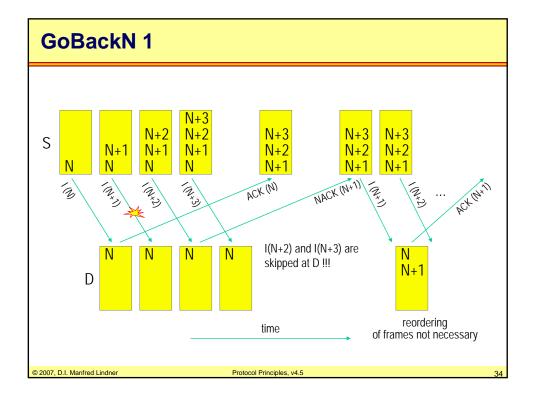


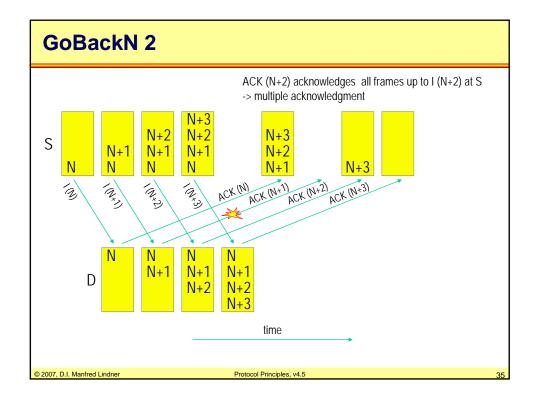


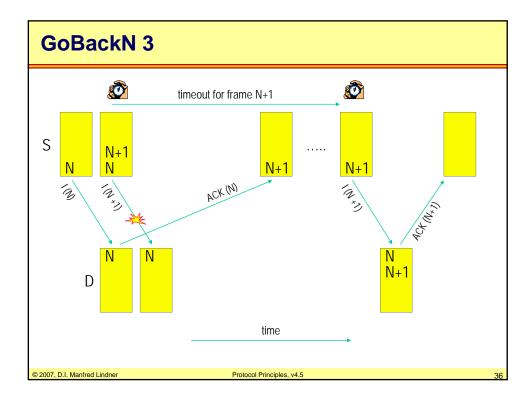


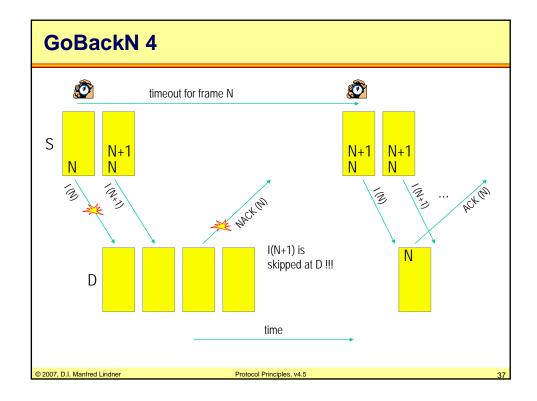


Agenda		
Introduction		
- 3 Layer Model	and Service Types	
• ARQ Techniqu	les	
<ul> <li>Introduction</li> </ul>		
– Idle RQ		
<ul> <li><u>Continuous RC</u></li> </ul>	2	
<ul> <li>Selective Ackr</li> </ul>	nowledgement	
<ul> <li>GoBackN</li> </ul>		
<ul> <li>Positive Acknowledge</li> </ul>	owledgement	
<ul> <li>Sequence Num</li> </ul>	nbers and Windowing	
<ul> <li>Delay Bandwith</li> </ul>	n Product	
<ul> <li>Flow Control</li> </ul>		
- HDLC Overview	W	
© 2007, D.I. Manfred Lindner	Protocol Principles, v4.5	38

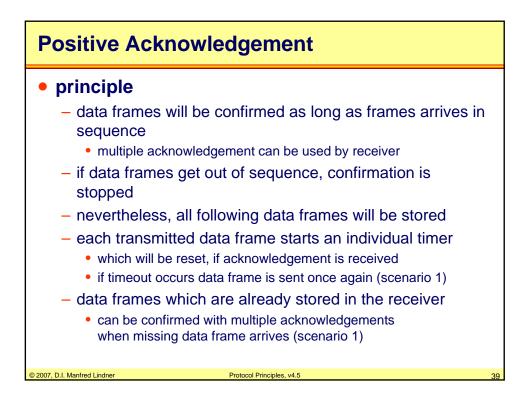


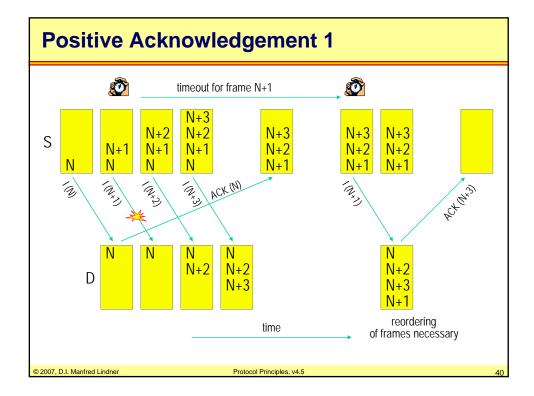


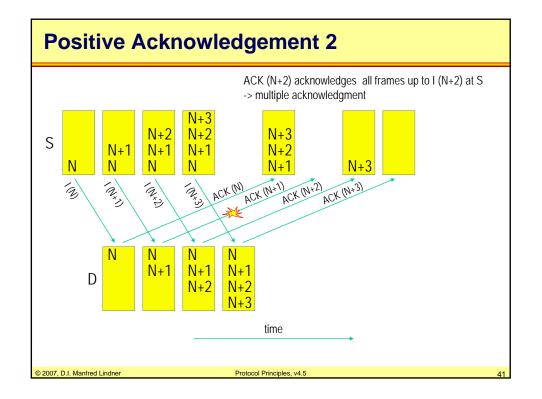



Agenda	
• Introduction	
- 3 Layer Mode	I and Service Types
• ARQ Techniq	ues
<ul> <li>Introduction</li> </ul>	
– Idle RQ	
<ul> <li><u>Continuous R</u></li> </ul>	Q
<ul> <li>Selective Ack</li> </ul>	knowledgement
<ul> <li>GoBackN</li> </ul>	
<ul> <li>Positive Ackr</li> </ul>	nowledgement
<ul> <li>Sequence Nu</li> </ul>	mbers and Windowing
<ul> <li>Flow Control</li> </ul>	
– HDLC Overvie	ew
© 2007, D.I. Manfred Lindner	Protocol Principles, v4.5 42

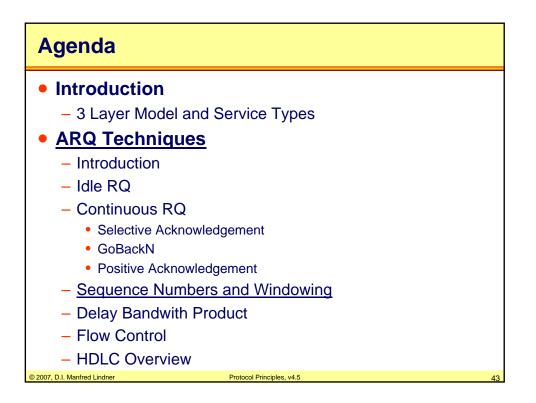


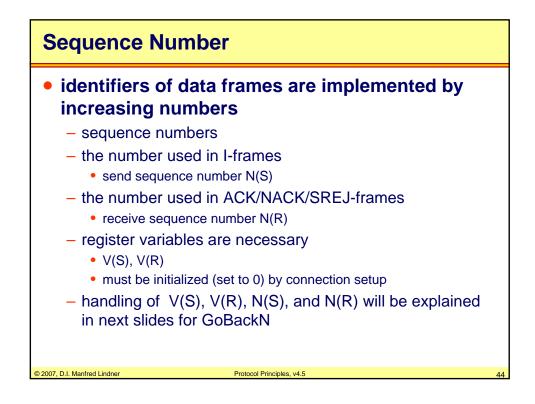


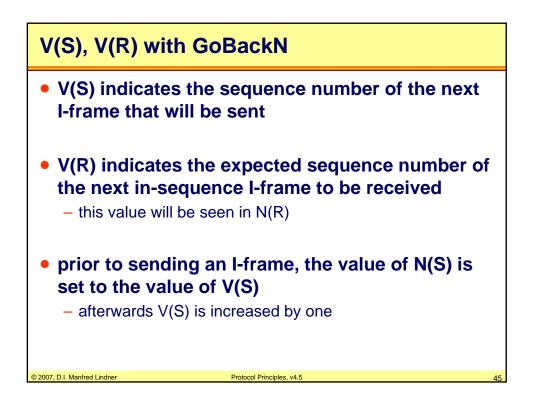


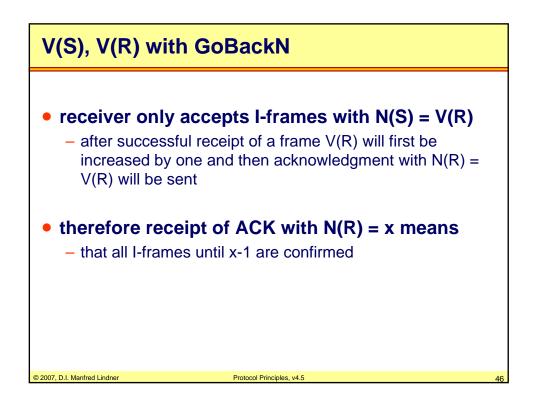


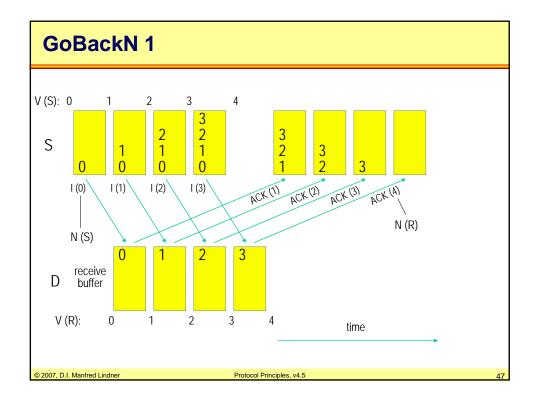


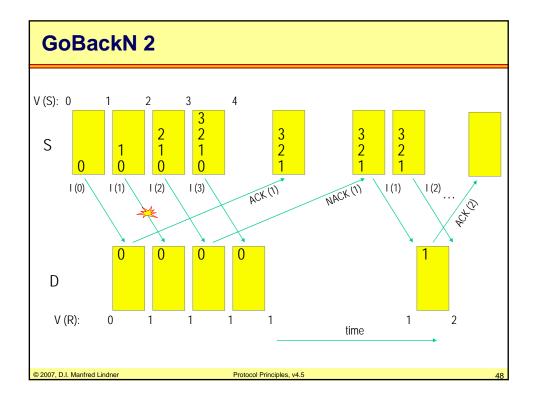

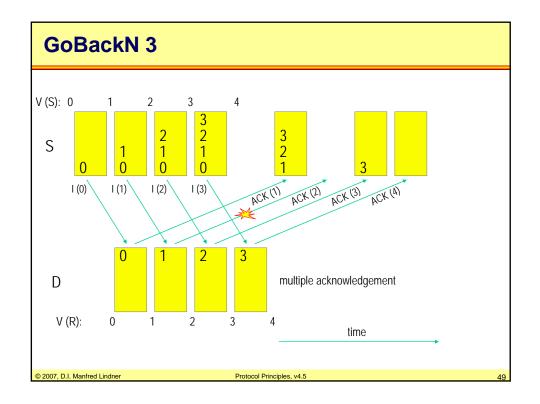

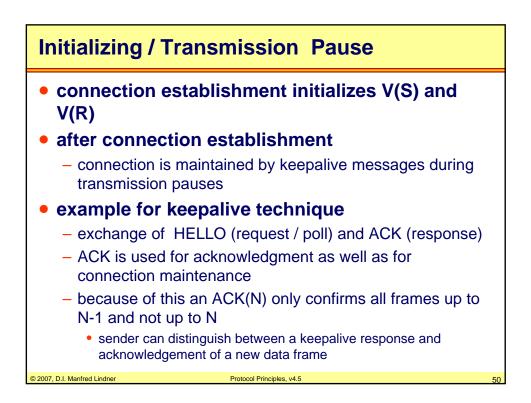


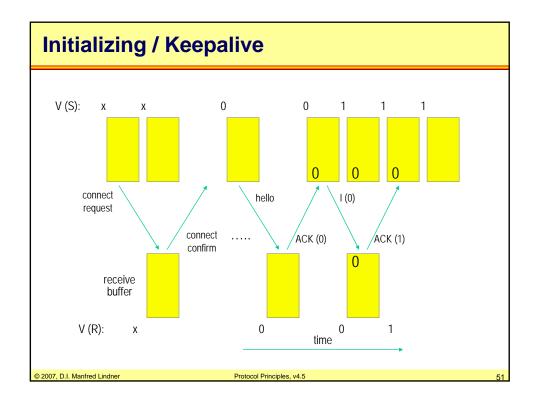


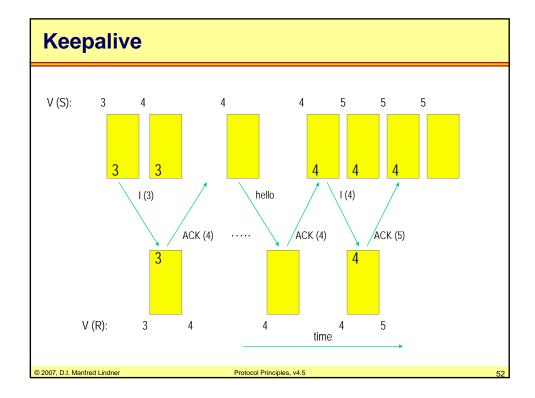



© 2007, D.I. Manfred Lindner


Page 02 - 26

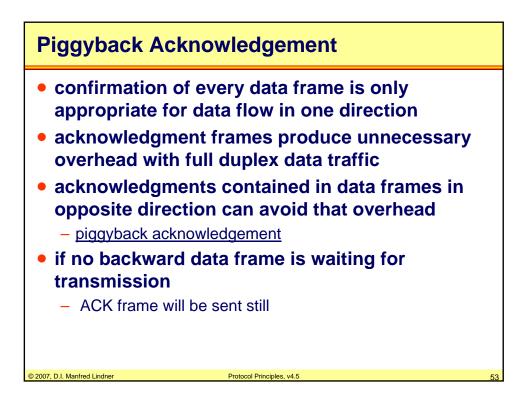


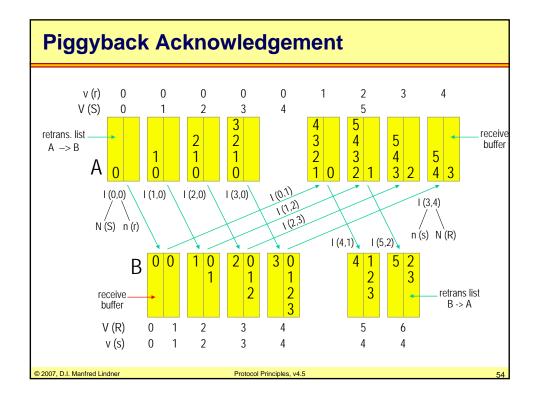


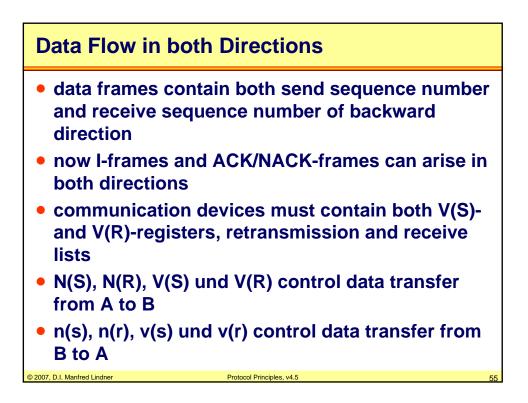


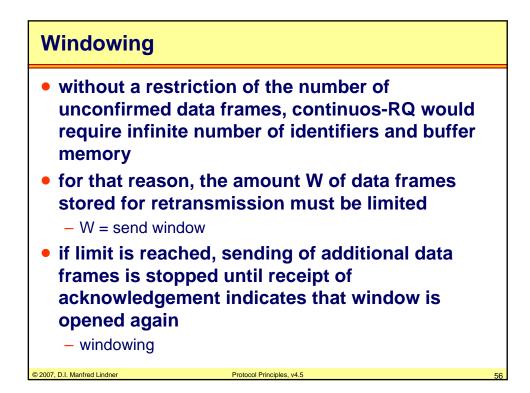


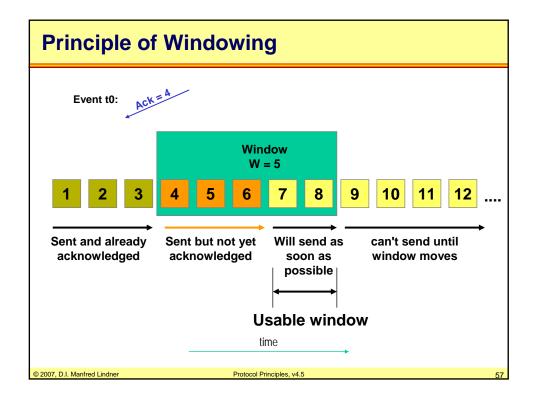

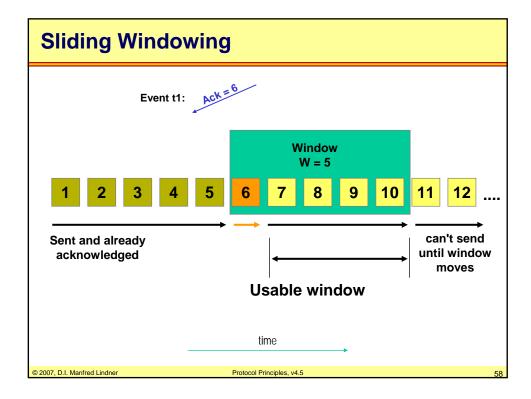

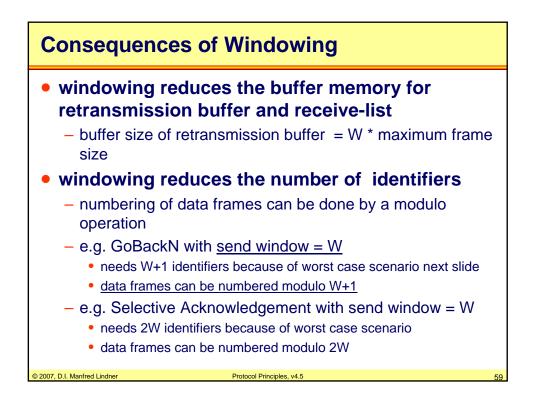

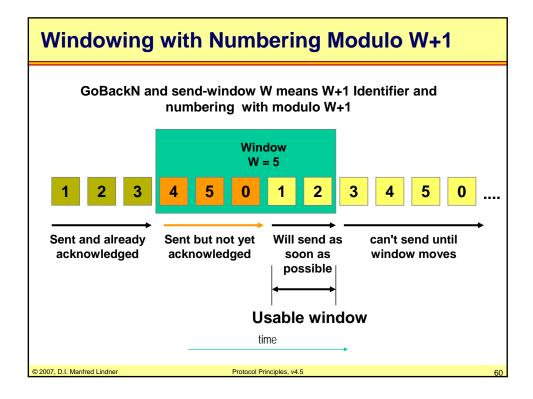


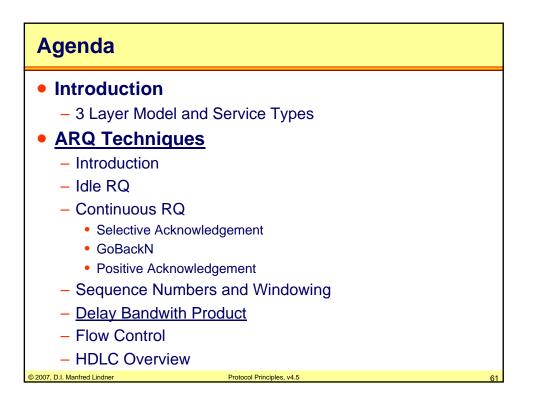



Tim	e to	o Tran	smit	a gi	ven	Nur	nbe	r of E	<b>3yte</b>	S
ç	erializ	ation Delay	(in ms) –	[ ( Numh	er of Byt	es * 8 )	/ ( Ritrat	e in sec )	1 * 1000	1
<u> </u>		ation Delay	<u>(</u> (11113) –		CI OI Dyi	03 07		c in 300 j	] 1000	,
	Bitrate	9,6 kbit/s	48 kbit/s	128 kbit/s	2,048 Mbit/s	10 Mbit/s	100 Mbit/s	155 Mbit/s	622 Mbit/s	1 Gigabit/s
	Number	Delay in	Delay in	Delay in	Delay in	Delay in	Delay in	Delay in	Delay in	Delay in
	of Byte	msec (10 <sup>-3</sup> )	msec (10 <sup>-3</sup> )	msec (10 <sup>-3</sup> )	msec (10 <sup>-3</sup> )	msec (10 <sup>-3</sup> )	msec (10 <sup>-3</sup> )	msec (10 <sup>-3</sup> )	msec (10 <sup>-3</sup> )	msec (10 <sup>-3</sup> )
Bit	0,125	0,104167	0,020833	0,007813	0,000488	0,000100	0,000010	0,000006	0,000002	0,00000
Byte	1	0,833333	0,166667	0,062500	0,003906	0,000800	0,000080	0,000052	0,000013	0,00000
PCM-30	32	26,666667	5,333333	2,000000	0,125000	0,025600	0,002560	0,001652	0,000412	0,00025
ATM cell	53	44,166667	8,833333	3,312500	0,207031	0,042400	0,004240	0,002735	0,000682	0,00042
Ethernet	64	53,333333	10,666667	4,000000	0,250000	0,051200	0,005120	0,003303	0,000823	0,00051
X.25	256	213,333333	42,666667	16,000000	1,000000	0,204800	0,020480	0,013213	0,003293	0,00204
IP	576	480,000000	96,000000	36,000000	2,250000	0,460800	0,046080	0,029729	0,007408	0,00460
Ethernet	1.518	1.265,000000	253,000000	94,875000	5,929688	1,214400	0,121440	0,078348	0,019524	0,01214
FR	8.192	6.826,666667	1.365,333333	512,000000	32,000000	6,553600	0,655360	0,422813	0,105363	0,06553
TCP	65.534	54.611,666667	10.922,333333	4.095,875000	255,992188	52,427200	5,242720	3,382400	0,842881	0,52427
		1kbit/s = 1 1KByte = 10								
007, D.I. Ma	anfred Lind	ner		Protoco	Principles, v4	1.5				


Tp = <u>Propagation Delay</u> (i	n ms) = [ ( Distand	e in m ) / ( velocity	in m/sec)]* 100
		v=200.000km/s	v=300.000km/s
	Distance	Delay in msec (10 <sup>-3</sup> )	Delay in msec (10 <sup>-3</sup> )
CPU Bus	10 cm	0,0000005	0,000003
	1 m	0,000050	0,000033
RS232, V24/V.28	15 m	0,0000750	0,0000500
LAN, Copper, RJ45	100 m	0,0005000	0,0003333
LAN, FO, X.21/V.11-V.	10 1 km	0,0050000	0,0033333
Local Subscriber Line	2,5 km	0,0125000	0,0083333
WAN Link Repeater	10 km	0,0500000	0,0333333
WAN Link Repeater	100 km	0,5000000	0,3333333
WAN FO Link Repeate	er 1.000 km	5,000000	3,3333333
WAN FO Link Repeate	er 10.000 km	50,000000	33,3333333
Satellite Link	40.000 km	200,0000000	133,3333333
Satellite Link	50.000 km	250,0000000	166,6666667
	100.000 km	500,0000000	333,3333333
	300.000 km	1500,0000000	1000,0000000


ong is a Bit	t?		
<u>Length</u> (in m) = [ ( 1	/ ( bitrate pe	r sec) ] * [ ( velocit	y in m/sec ) ]
	Bitrate	Bit Length in meter	Bit Length in meter
Analogue Modem	9,6 kbit/s	20022 22	24050.00
Analogue Modem	48 kbit/s	20833,33 4166.67	31250,00 6250.00
DS0	64 kbit/s	3125,00	4687,50
ISDN (2B)	128 kbit/s	1562,50	2343,7
PCM-30. E1	2.048 Mbit/s	97.66	146.4
Token Ring 4	2,040 Mbit/s	50,00	75,0
Ethernet	10 Mbit/s	20,00	30,0
Token Ring16	16 Mbit/s	12,50	18,7
Fast Ethernet, FDDI	100 Mbit/s	2.00	3,0
ATM STM1. OC-3	155 Mbit/s	1.29	1,9
ATM STM4, OC-12	622 Mbit/s	0,32	0,4
Gigabit Ethernet	1 Gigabit/s	0,20	0,3
OC-48	2,5 Gigabit/s	0,08	0,1
10 Gigabit Ethernet	10 Gigabit/s	0,02	0,0
		Copper	LWL - Free Space
		200.000 km /sec	300.000 km / sec

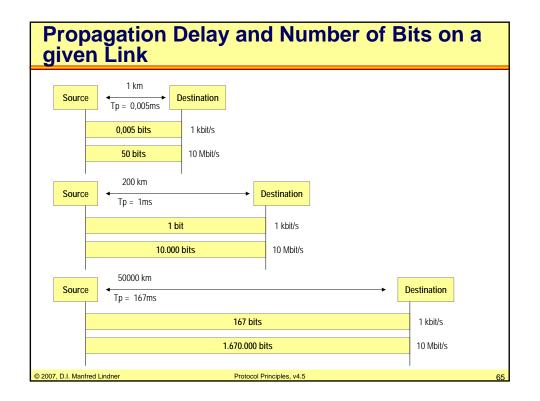


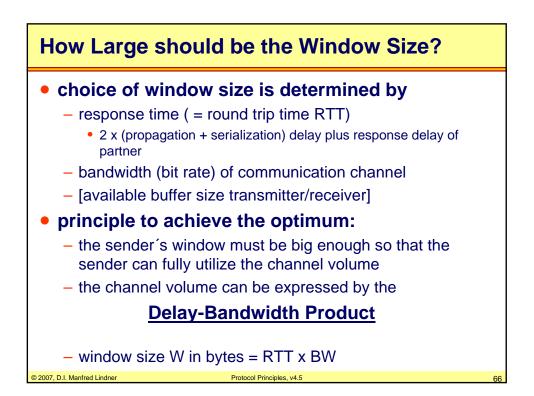


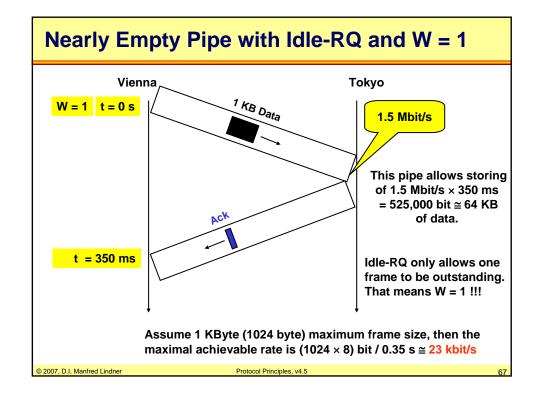

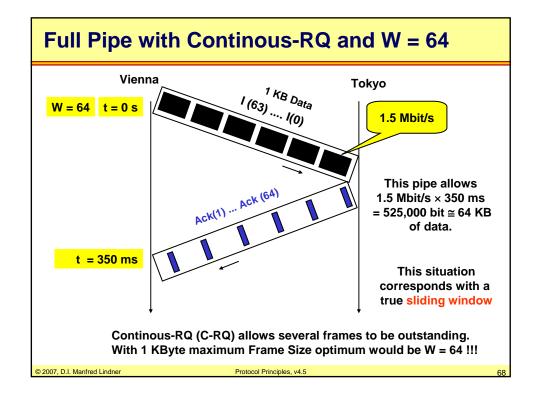


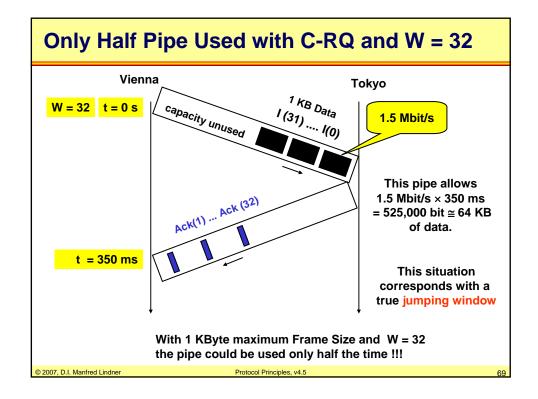


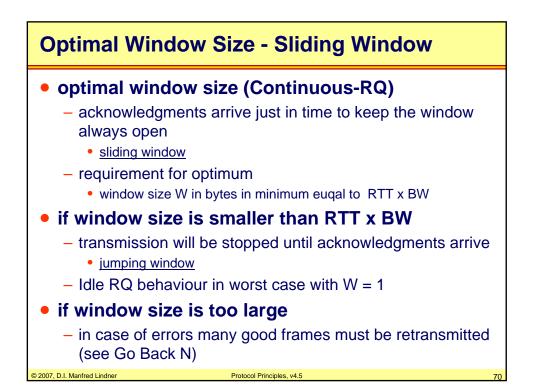


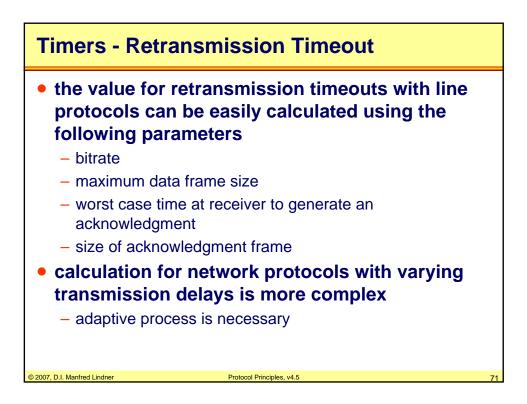



Agenda
Introduction
<ul> <li>– 3 Layer Model and Service Types</li> </ul>
ARQ Techniques
– Introduction
– Idle RQ
– Continuous RQ
<ul> <li>Selective Acknowledgement</li> </ul>
<ul> <li>GoBackN</li> </ul>
<ul> <li>Positive Acknowledgement</li> </ul>
<ul> <li>Sequence Numbers and Windowing</li> </ul>
<ul> <li>Delay Bandwith Product</li> </ul>
– <u>Flow Control</u>
– HDLC Overview
© 2007, D.I. Manfred Lindner Protocol Principles, v4.5 72

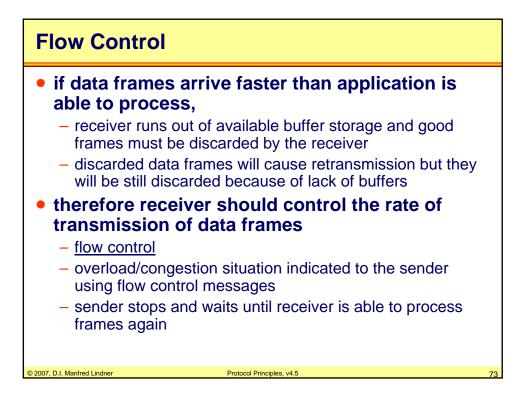


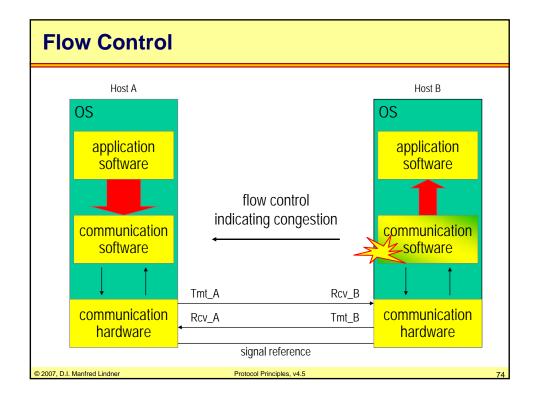


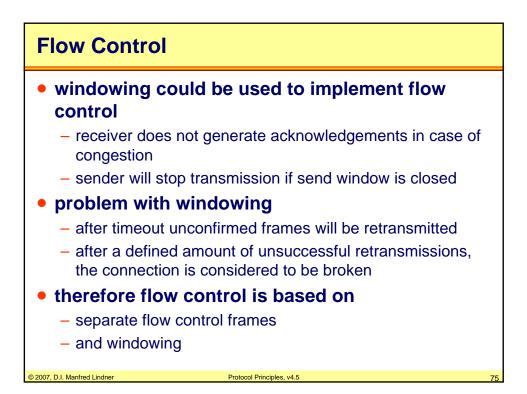

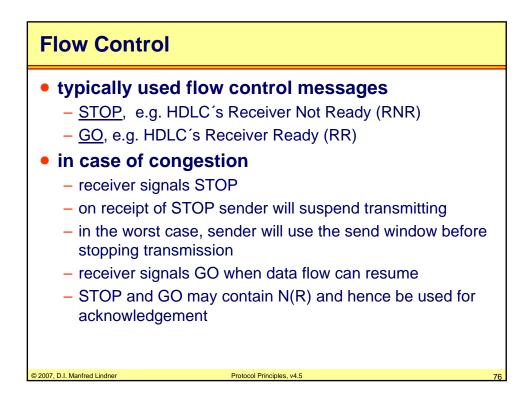


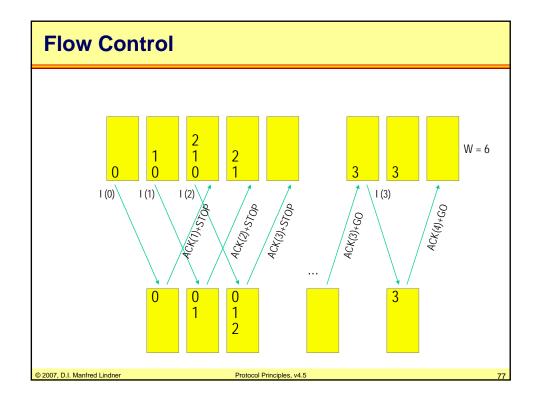


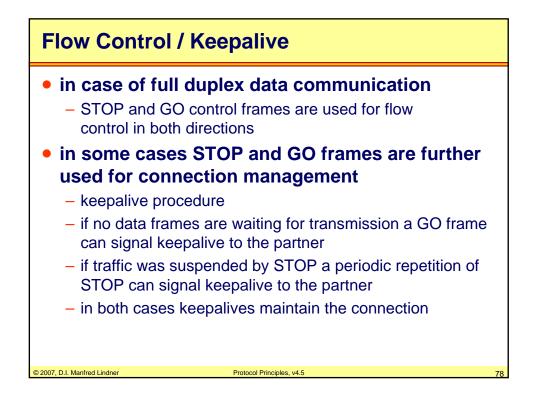


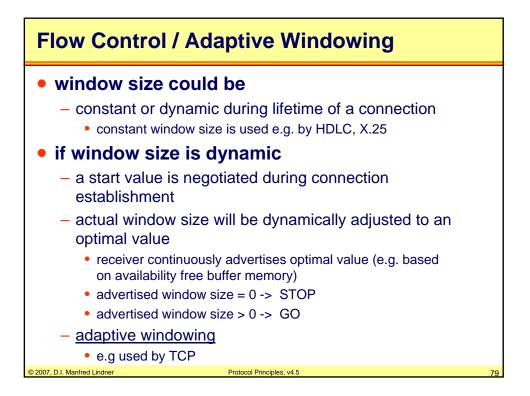


Agenda
Introduction
<ul> <li>– 3 Layer Model and Service Types</li> </ul>
<u>ARQ Techniques</u>
- Introduction
– Idle RQ
– Continuous RQ
<ul> <li>Selective Acknowledgement</li> </ul>
GoBackN
<ul> <li>Positive Acknowledgement</li> </ul>
<ul> <li>Sequence Numbers and Windowing</li> </ul>
<ul> <li>Delay Bandwith Product</li> </ul>
– Flow Control
– <u>HDLC Overview</u>
© 2007, D.I. Manfred Lindner Protocol Principles, v4.5 80

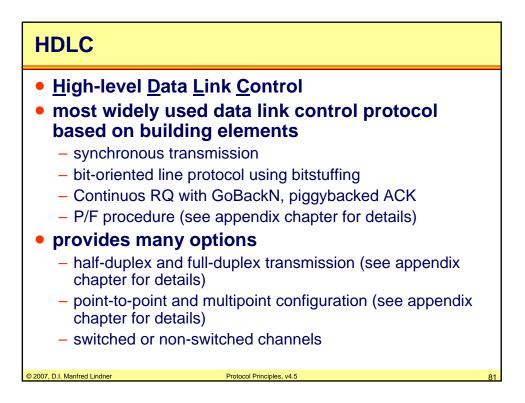

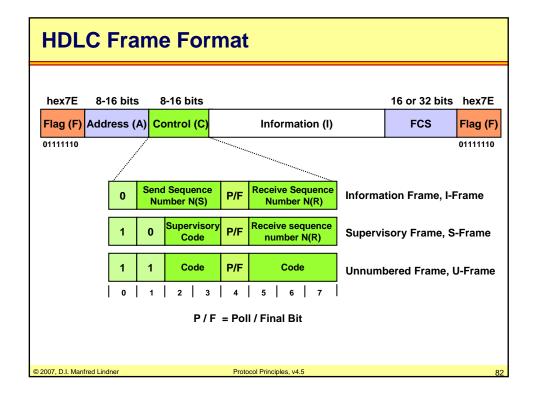

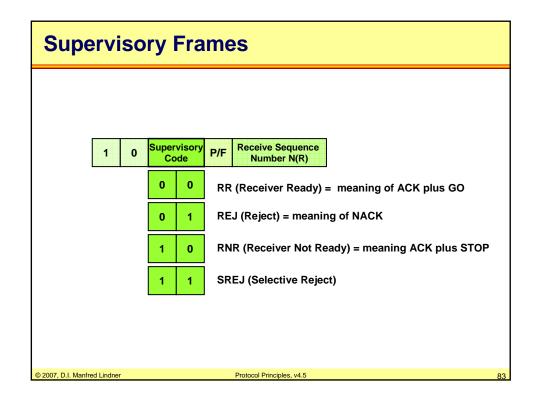

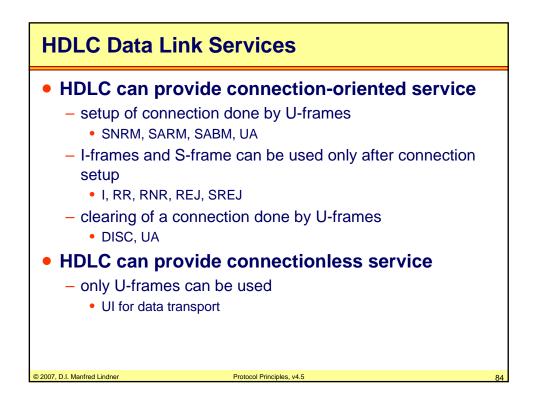

Fram	ne-Types				
Co	nnection-Oriented		(	Connection-Less	
1	Information		UI	Unnumbered Information	
RR REJ RNR SREJ	Receiver Ready Reject Receiver Not Ready Selective Reject				
SARM SNRME	Set Normal Response Mode Set Async Balanced Mode Set Async Response Mode Set NRM Extended Mode Set ABM Extended Mode			Miscellaneous	
SARME	Set ARM Extended Mode		XID	Exchange Identification	
DISC	Disconnect		UP	Unnumbered Poll	
UA	Unnumbered Acknowledge		SIM RIM	Set Initialization Mode Request Initialization Mode	
RSET FRMR	Reset Frame Reject		NR0-3	Non-Reserved 0	
RD DM	Request Disconnect Disconnect Mode				
2007, D.I. Manfre	ed Lindner Pr	otocol Principl	es, v4.5		

